


Recommended pedestal locations apply to all pedestal types except as noted. For pedestal spacing on custom benches, contact engineering for guidance. Hardware for attachment to benches is included with pedestals. Pilot holes must be drilled by the installer/end-user. Use appropriate hardware (not included) for anchoring pedestals to the floor.

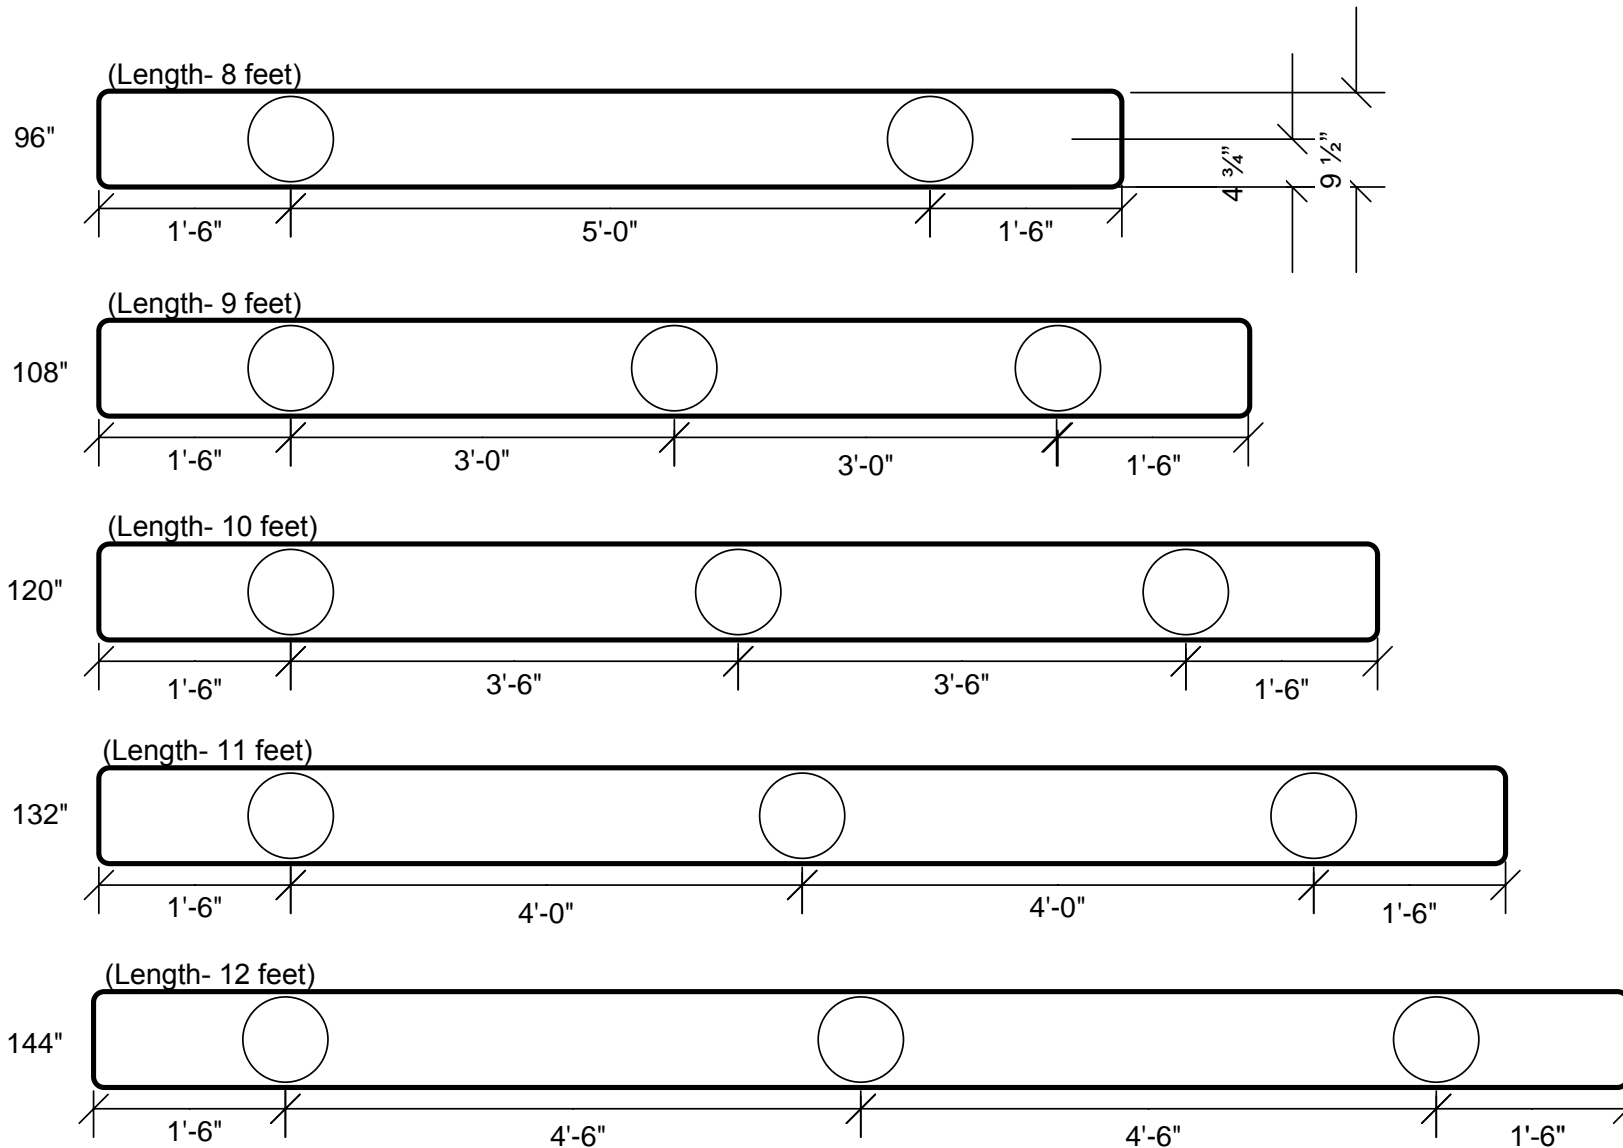

Recommended pedestal locations apply to all pedestal types except as noted.

For pedestal spacing on custom benches, contact engineering for guidance.

Hardware for attachment to benches is included with pedestals. Pilot holes must be drilled by the installer/end-user. Use appropriate hardware (not included) for anchoring pedestals to the floor.