Assembly Instructions


One Wide Jorgenson Signature Box Locker




Identify Parts

Remove unassembled locker parts from the packaging. Next, locate and identify each part based on the images show below:

TIP: Tip: Ensure that the bolts are installed on the outside of locker and nuts are secured on the inside of the locker.












(2) Rear Legs Legs are identical






Start Assembling


- Position the back panel on straight, even flooring or pair of saw horses.
- Gently bolt the left and right side panel to the inside of each back panel flange.

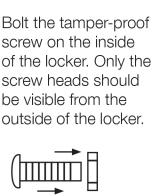

Left Side Panel

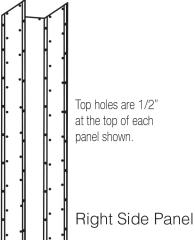

View of locker with back panel flat on floor or saw horses

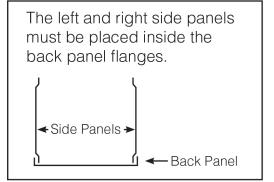




Assembly Instructions

One Wide Jorgenson Signature Box Locker

• 3 •

Continued Assembly

• Slightly bolt the top/bottom panels, and legs inside the side and back panel.

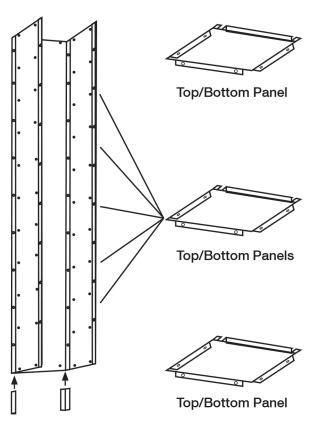


Note:

Top and bottom panels have two (2) round, predrilled holes that can be found on the back flange and are designed to bolt to the back panel.

Legs are now ready to be bolted. Place locker in an upright position, legs might require some adjusting in order to level the locker against the wall and floor.

Insert Front Door Frame

• After the top and bottom panels have been attached, proceed to insert the door frame on the outside of the left, right and bottom panels.

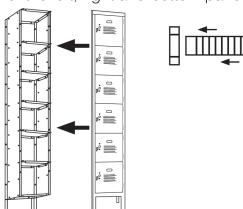



Assembly Instructions

One Wide Jorgenson Signature Box Locker



Insert Front Door Frame

- Place locker in the upright position and make sure locker is level, making any necessary adjustments with locker legs.
- When locker is level, test the door to determine it opens properly. Bolts can be adjusted if there are any problems with opening and closing.
- Once the door is functioning correctly, tighten all bolts.
- To instill proper safety measures, we highly advise anchoring the locker to the floor or wall to avoid injury or theft.

