


30-Compartment Tablet Locker - Assembly Instructions

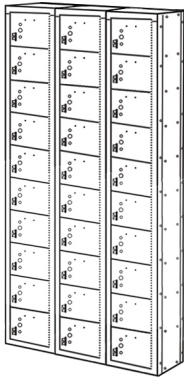


Assembly of 30-Compartment Tablet Locker

All bolts are to be inserted on outside of locker while all nuts are to be fastened on the inside of the locker.


Step One:

Remove unassembled locker from shipping packing and identify all parts as shown below.

(3) Front Door - Frames

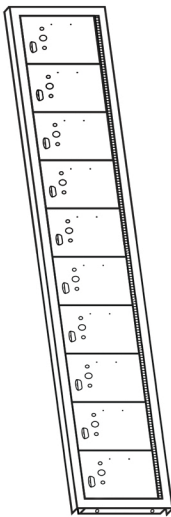


(3) Back Panel

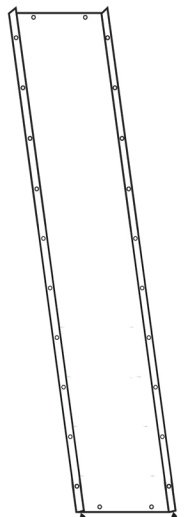

Panel Flanges


(4) Side Panel

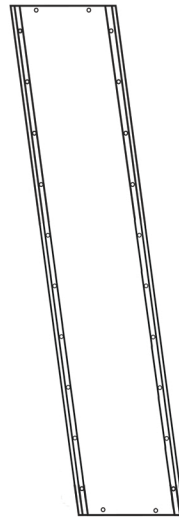

Panels are identical for convenience


(27) Compartment Panels (6) Top/Bottom Panels

Panels are identical for convenience

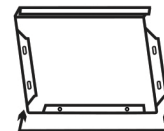

Panel Flanges


Top/Bottom are identical for convenience

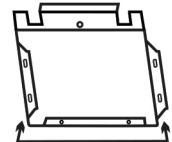


Panel Flanges

Step Two:

- Place back panel on flat even floor or pair of saw horses.
- Lightly bolt left and right side panels to the inside of each back panel flange.

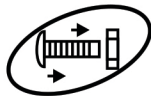

Bolt tamper-proof screws on the inside of the locker. Only the screw heads should show on the outside of the locker.

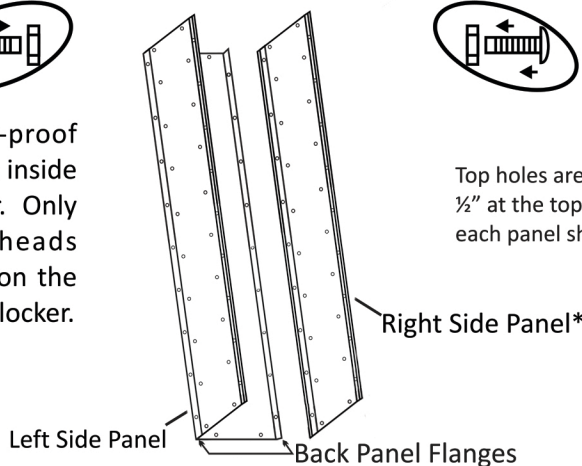


View of the locker with back panel on the floor or saw horses

Example:

The left and right side panels must be placed inside the back panel flanges.

Inside side panels are shared between lockers

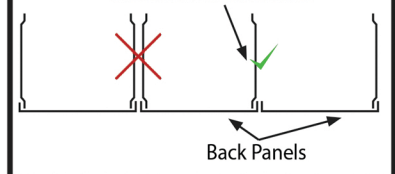


For missing parts, components or additional assistance please contact your customer service rep or call 1-877-952-0151

30-Compartment Tablet Locker - Assembly Instructions

Step Three

- Lightly bolt (27) compartment panels inside each side panels and back panel.
- Lightly bolt top and bottom panels inside both side panels and back panel*.
- * Note: Both bottom and top panels are identical.

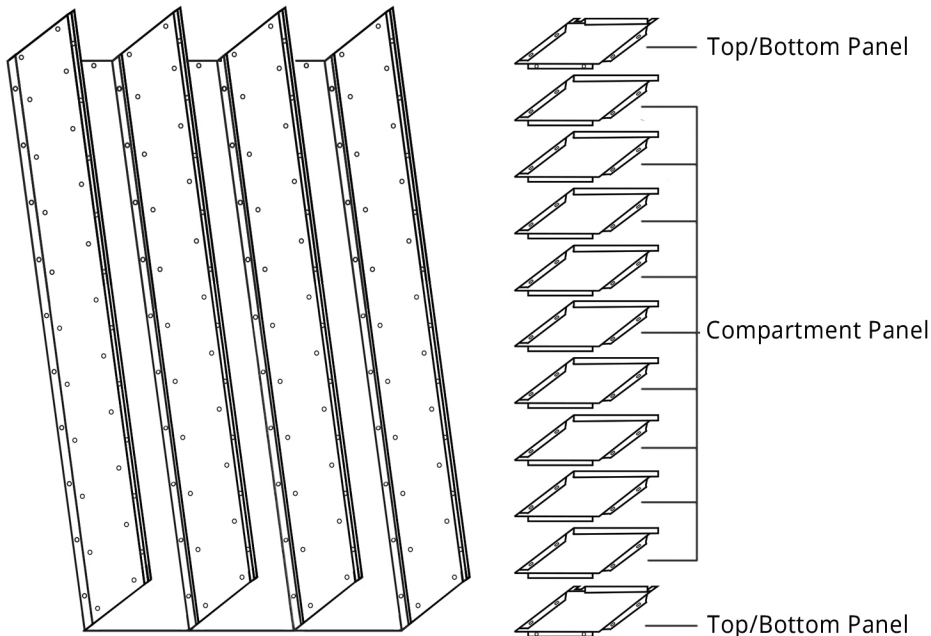

Note



Top and bottom panels have two (2) round pre-drilled holes located on the back flange intended to bolt to back panel.

Compartment panels only have oblong holes on the side of the flanges.

Assemble the compartment panels with the panels bottom lips facing the front opening of the locker.


Step Four

- Once the top/bottom panels have been assembled, insert front door frame on the outside of the left, right and bottom panels.
- Ensure that all compartment doors open properly. Adjusting bolts as needed will allow compartment doors to open and close, if problems occur.
- If doors operate correctly, tighten all bolts.
- In the interest of safety, we highly recommend anchoring the locker to prevent injury or theft.

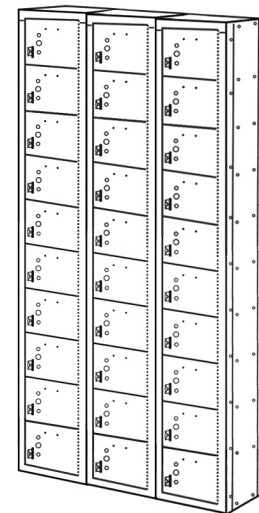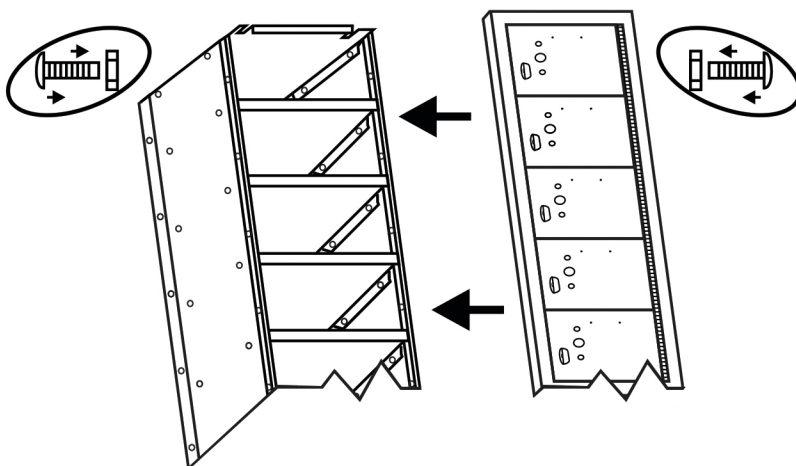

For missing parts, components or additional assistance please contact your customer service rep or call 1-877-952-0151

30-Compartment Tablet Locker - Assembly Instructions

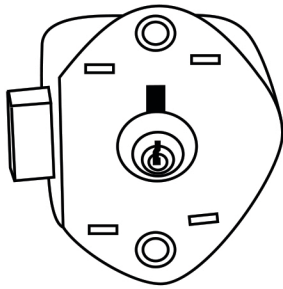


We've made installing the built-in key locks for our cell phone locker series, convenient and easy.

On the back side of the lock is two bolts. Remove the nuts and tamper-proof screws from each lock and if the door pulls are installed on the locker doors, remove the bolts, tamper-proof screws, and door pulls. Install the lock(s) on the cell phone locker doors as follows.

Open cell phone locker door and insert the front of the lock on the back side of the locker door. With the locker compartment door *OPEN*, the lock serial number should be above the lock dead bolt. The lock dead bolt should be open and facing to the right, away from the door frame.


Locker Door Frame

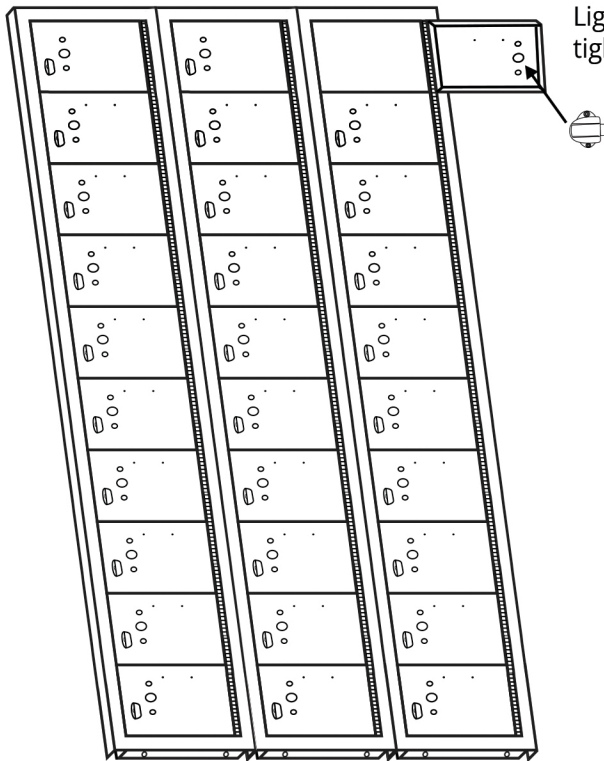


Lightly tighten both nuts and test that the door locks securely. If so, finish tightening bolts and continue installing the remaining locks.

When installing the lock on the back of the locker door.

Correct

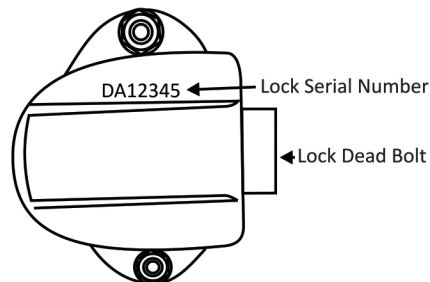

Incorrect!

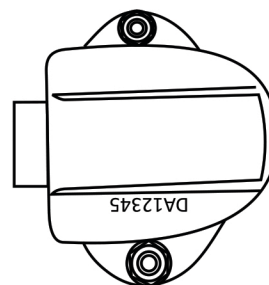

Lock dead bolt must open to the **RIGHT** on the back side of the locker door.

Note: Lock dead bolt should be open to the right, away from the locker door frame.



Jorgenson Lockers

A div. of Jorgenson Industrial Companies
STRONG on Customer Service

For missing parts, components or additional assistance please contact your customer service rep or call 1-877-952-0151