




# HEAVY-DUTY VENTILATED K.D. STOCK LOCKER ASSEMBLY INSTRUCTIONS

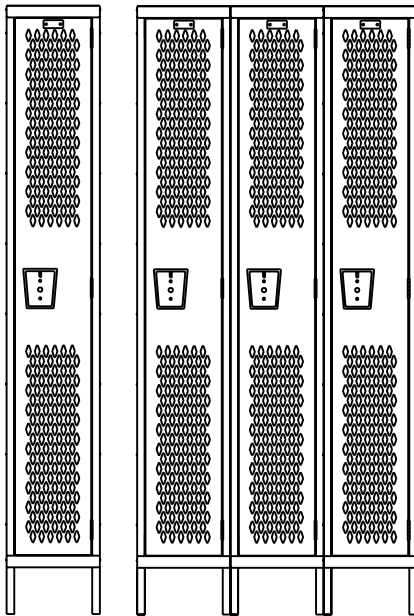

1 WIDE      3 WIDE  
SINGLE TIER

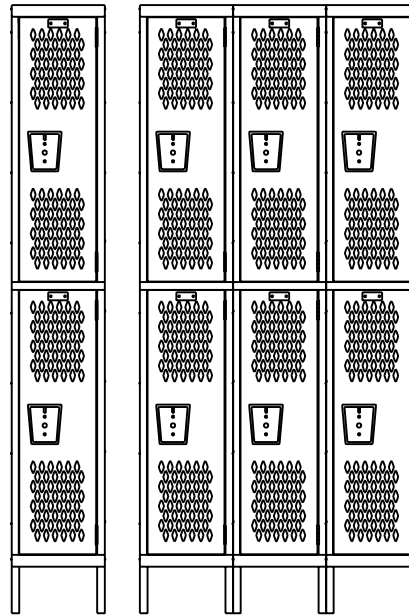

1 WIDE      3 WIDE  
DOUBLE TIER

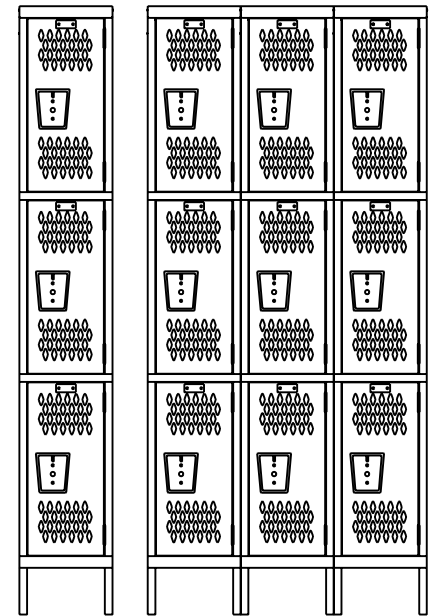

1 WIDE      3 WIDE  
TRIPLE TIER

## General Instructions

1. Check material received against the packing list. First check the number of packages received and then check the contents of each package.
2. Check material received for damage. If damage has occurred, secure a "damage notation" from the carrier.
3. Identify each part as it is unpacked and put like parts together as close as possible to the working area in which they are to be assembled.
4. Be careful to use the correct hardware as specified in the assembly instructions.
5. Items with suffix (xx) are available options.

## CAUTION

IN THE INTEREST OF SAFETY, ALL LOCKERS MUST BE SECURELY ANCHORED TO THE FLOOR AND/OR WALL.  
FOR SAFETY, HANDLE ALL COMPONENTS CAREFULLY AND WEAR WORK-GLOVES WHEN ASSEMBLING LOCKERS.

INSTALL ALL UNITS PLUMB AND TIGHTEN ALL HARDWARE SECURELY.

RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.




Sold By **SchoolLockers.com**

877.952.0151

# HEAVY-DUTY VENTILATED K.D. STOCK LOCKER ASSEMBLY INSTRUCTIONS

## PACKAGE CONTENTS

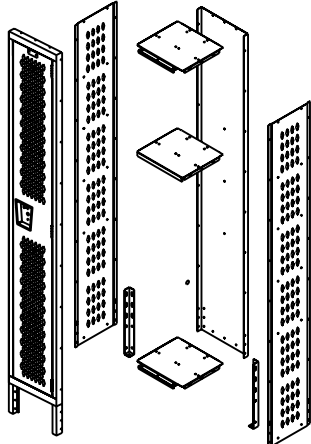REF. NO.	DESCRIPTION	PART NO.	1-WIDE QUANTITY			3-WIDE QUANTITY			
			1-TIER	2-TIER	3-TIER	1-TIER	2-TIER	3-TIER	
①	REAR PANEL	KRww72-18	1	1	1	3	3	3	 <p>Single Tier KD Locker</p>
②	RIGHT/LEFT SIDE PANEL	KPdd72-DP16	2	2	2	4	4	4	
③	TOP/BOTTOM SHELF	KSwwdd-16	2	3	4	6	9	12	
④	HAT SHELF	KHwwdd-16	1	-	-	3	-	-	
⑤	SINGLE CEILING HOOK	H5K	2	4	-	6	12	-	
⑥	DOUBLE CEILING HOOK	H7K	1	2	3	3	6	9	
xx ⑦	COAT ROD BRACKET	xxTRH 200	xx2	xx4	-	xx6	xx12	-	
xx ⑧	COAT ROD	xxKCR	xx1	xx2	-	xx3	xx6	-	
⑨	DOOR FRAME ASSEMBLY	KDFww78-tHV	1	1	1	3	3	3	
x ⑩	DOOR	KDww72-tDP14	1	2	3	3	6	9	
x ⑪	RECESSED HANDLE S.S.	SRP100	1	2	3	3	6	9	
x ⑫	LOCK CHANNEL	KLhh-t	1	2	3	3	6	9	
x ⑬	CHANNEL STOP	CS002	2	4	6	6	12	18	
x ⑭	NYLON LATCH	DLB100B	2	4	6	9	12	18	
x ⑮	SPRING	LS100	2	4	6	9	12	18	
x ⑯	LOCK BRACKET	SLB101L	1	2	3	3	6	9	
x ⑰	PLASTIC LIFTER	LC100B	1	2	3	3	6	9	
⑱	REAR LEG	KLG	2	2	2	2	2	2	
x ⑲	BUMPER	KDB300	3	4	6	9	12	18	
xxx ⑳	NUMBER PLATE	NPH	1	2	3	3	6	9	<p>PART NUMBER SUFFIX SHOWS WIDTH, DEPTH, HEIGHT AND TIER. CUSTOMER TO SPECIFY.</p>
㉑	NUMBER PLATE RIVET	RV101	2	4	6	6	12	18	
㉒	3/8" SLOTLESS BOLT	MBT202	62	74	70	134	166	188	
㉓	HEX NUT	N201	60	70	64	128	154	170	
㉔	ESCUTCHEON PLATE	RPE100	1	2	3	3	6	9	
㉕	HI-DOME CAP NUT	N110	2	4	6	6	12	18	
x ㉖	RIVET (HANDLE)	RV102	1	2	3	3	6	9	
x ㉗	RIVET (HINGE)	RV102	6	8	12	18	24	36	

### NOTE:

FOR OPTIONAL INDIVIDUAL SLOPE TOPS,  
SEE SUPPLEMENTAL INSTRUCTION SHEET NO. ASY-H-KIST-A.

FOR OPTIONAL 6" HIGH CLOSED METAL BASE,  
SEE SUPPLEMENTAL INSTRUCTION SHEET NO. ASY-H-KIST-B.

x SHIPS PRE-HUNG IN DOOR FRAME ASSEMBLY. ⑨  
xx OPTIONAL ITEM

### PART NO. LEGEND:

ww = WIDTH  
dd = DEPTH  
hh = HEIGHT (FRAME)  
t = TIER  
V = VENTILATED

**TOOLS REQUIRED: 3/8" NUT  
DRIVER (3/8" SOCKET MAY BE  
SUBSTITUTED)**

## TWO-YEAR WARRANTY

HALLOWELL K.D. LOCKERS ARE COVERED AGAINST ALL DEFECTS IN MATERIALS AND WORKMANSHIP EXCLUDING FINISH, DAMAGE RESULTING FROM DELIBERATE DESTRUCTION AND VANDALISM FOR A PERIOD OF TWO YEARS.

Sold By


**SchoolLockers.com**



877.952.0151

INSTRUCTION ASY-H-HDV-KD-2

# HEAVY-DUTY VENTILATED K.D. STOCK LOCKER ASSEMBLY INSTRUCTIONS

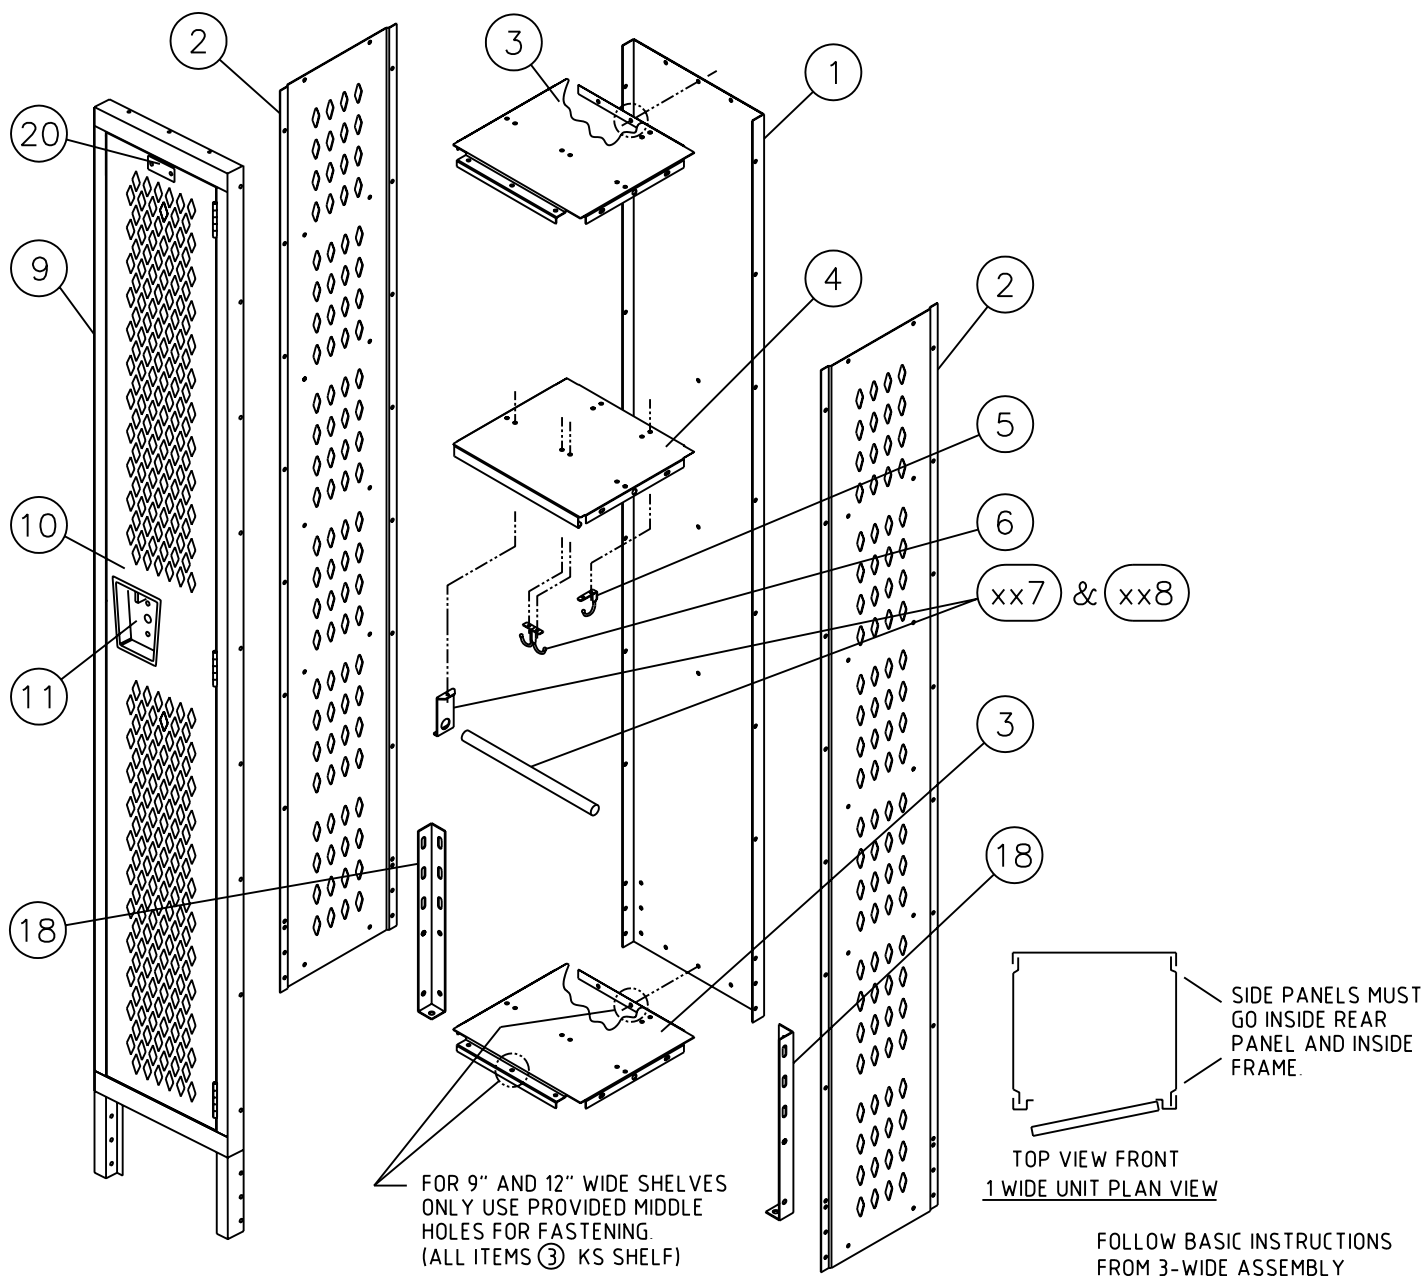

COAT ROD (KCR<sub>ww</sub>) & COAT ROD BRACKETS (TRH 200) ARE OPTIONAL.

HALLOWELL MAKES EVERY EFFORT TO ENSURE THAT ALL UNITS SHIP COMPLETE; HOWEVER, SHOULD YOUR UNIT CONTAIN MISSING OR DAMAGED PARTS, REPLACEMENTS MAY BE OBTAINED FROM HALLOWELL. TO OBTAIN PARTS, FOLLOW THESE INSTRUCTIONS.

## PLEASE PROVIDE THE FOLLOW INFORMATION:

MODEL NUMBER

DESCRIPTION OF PART(S) NEEDED & PART  
NUMBER(S) AS SHOWN IN PARTS LIST

COLOR

PURCHASE DATE

COMPANY NAME & CONTACT PERSON

WHERE THE PRODUCT WAS PURCHASED FROM

IF REQUESTING PARTS BY TELEPHONE, ASK FOR CUSTOMER SERVICE & PROVIDE THE ABOVE INFORMATION.

Sold By

**SchoolLockers.com**



877.952.0151

INSTRUCTION ASY-H-HDV-KD-3

(A GROUPING OF 3-WIDE SINGLE TIER LOCKERS ILLUSTRATED)

**STEP 1**  
LAY REAR PANELS  
SIDE BY SIDE.

① KR - REAR PANEL

**STEP 2**

BOLT KP ② SIDE PANELS  
TO KR ① REAR PANELS.  
SIDE PANELS ② NEVER  
FIT BETWEEN KR ① REAR

STEP 3

**STEP 5**

**BOLT DOOR AND FRAME ⑨ ASSEMBLIES TO KS ③ SHELVES AND KP ② SIDE PANELS. STAND UNIT UP AND ALIGN LOCKER TOPS EVENLY. TIGHTEN ALL BOLTS AND NUTS.**

**NOTE: WHEN BOLTING ONE UNIT TO ANOTHER, OMIT ONE SET OF BOLTS IN END FRAME AND SIDE TO MINIMIZE GROWTH FROM BOLT HEADS.**

SIDE PANELS MUST  
GO INSIDE REAR  
PANEL AND INSIDE  
FRAME.

BRACKETS TO BE BOLTED TO UNDERSIDE  
OF HAT SHELF WITH COAT ROD IN BETWEEN.

xx(8) COAT ROD (xxKCRww)



TO BE BOLTED TO  
UNDERSIDE OF HAT SHELF.

13  
PLASTIC CHANNEL  
6702 66000

RECESSED HAND  
ESCUTCHEON PL



⑬  
PLASTIC CHAIR



INSIDE DOOR VIEW

Diagram illustrating the components of the lock assembly:

- 12 LOCK CHANNEL
- 15 SPRING LS100
- 14A LATCH SPRING ASSEMBLY DLS100
- 14 NYLON LATCH DLB100B
- 16 LOCK BRACKET ASSEMBLY SLB101L
- 17 PLASTIC LIFTER LC100B

EXPLODED VIEW OF LOCK CHANNEL

Diagram illustrating the assembly of the escutcheon plate. The components shown are:

- 22: SLOTLESS BOLT
- 24: ESCUTCHEON PLATE
- 25: HI-DOME NUT
- 11: RECESSED HANDLE

### ASSEMBLY OF ESCUTCHEON PLATE

### ASSEMBLY OF NUMBER PLATE

**SchoolLockers.com**

**Hallowell®**  
DIV. LIST INDUSTRIES INC.

877.952.0151

INSTRUCTION ASY-H-HDV-KD-4